


Index		
No.	Part No.	Description
1.	14-101703-000	Assembly - Rear Frame
2.	14-100713-000	Rear Frame - only
3.	11-010785-000	Hex Serrated Flange Head Screw (1/4-20 x 3/4")
4.	11-652054-000	Rubber Washer (1/4 ID x 3/4 O.D.)
5.	11-010782-000	Hex Serrated Flange Head Screw (1/4-20 x 1/2")
6.	11-106650-000	Socket Head Shoulder Screw (5/16-18 x 3/8" x 3/8")
7.	11-651033-000	Grommet (.375 I.D. x .875 O.D.)
8.	11-171501-000	Nut (5/16-18)
9.	14-100069-000	Caster Mount Plate
10.	11-007180-015	Screw Flat Head Socket Cap (1/4-20 x 3/4")
11.	14-100541-000	Speed Sensor w/Foam, Bracket
12.	14-100959-000	Lower Caster Mount Plate
13.	11-010783-000	Screw Hex Serrated Flange Head (5/16-18 x 3/4")
14.	11-005272-015	Screw Socket Head Cap (5/16-18 x 2")
15.	14-100439-000	Lower, Tank Support Bracket
16.	14-100254-000	Assembly - Speed Sensor w/Cable
17.	14-100134-001	Hinge Bracket R.H. Handle
18.	11-010789-000	Hex Flange Head Screw (5/16-18 x 1-1/4")
19.	14-100543-000	Assembly - Over Travel Block
20.	11-603131-000	Cable Tie Mount
21.	14-100434-000	Assembly - Buffer Brush Shield w/Felt
22.	11-199003-015	Lock Washer (#10)
23.	11-006118-015	Button Head Socket Cap Screw (10-32 x 1/2")
24.	14-100752-000	Battery Tray Bracket
25.	14-100254-000	Assembly - Speed Sensor w/Cable
26.	14-100499-000	Assembly - Rear Shaft Wheels, Urethane
27.	11-603105-000	Cable Tie (7.25" x .19")

MAX Rear Frame

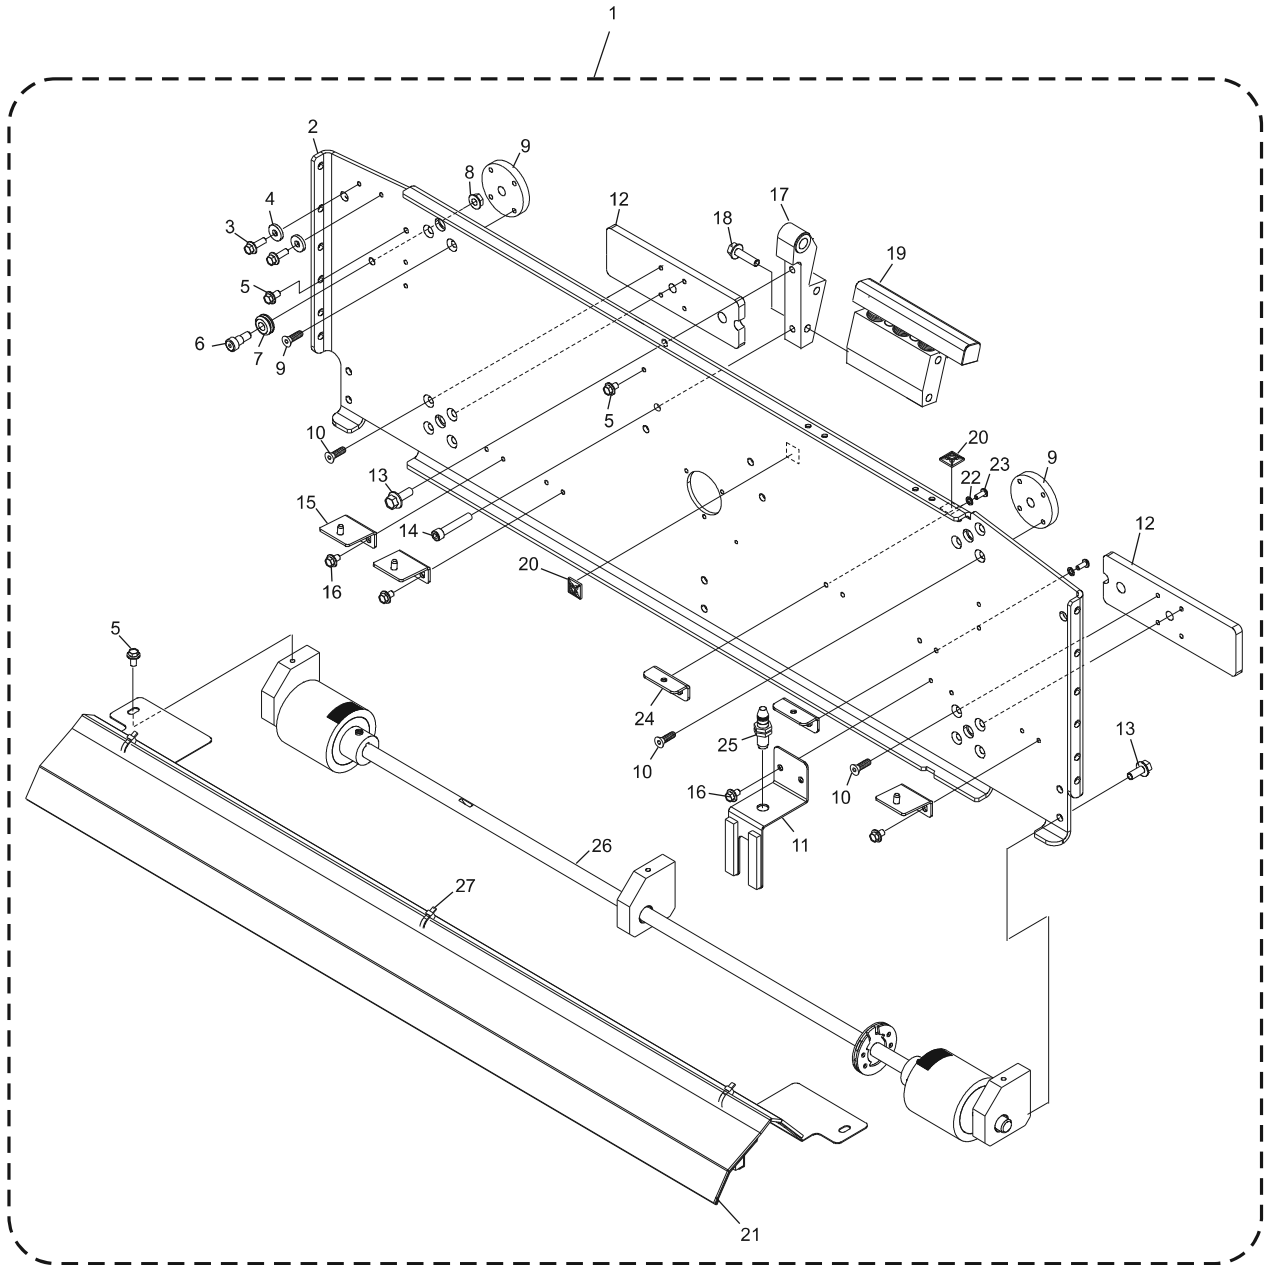

MAX Rear Frame