


Index No.	Part No.	Package / Order Reference	Description
1.	47-076891-230		208/230V Motor w/Cables and Pulley - includes index nos. 2, 3, 4, 4a, 4b, 5, 5a, 5b, and 5c
	47-076891-400		400V Motor w/Cables and Pulley - includes index nos. 2, 3, 4, 4a, 4b, 5, 5a, 5b, and 5c
2.	99-076885-000		Motor w/Key
3.	47-036703-001		Pulley
4.	47-245429-004		Thermal Overload Switch, Cable Assembly - includes index nos. 4, 4a, and 4b
	4a.11-680302-000		Pin
	4b.11-680116-001		Housing
5.	47-076898-000		Ball Accelerator Cable - includes index nos. 5a, 5b, and 5c
	5a.11-696737-000		Terminal
	5b.11-696719-000		Housing
	5c.47-224762-004		Terminal
6.	11-051028-001		Hex Head Cap Screw
7.	11-052048-001		Flat Washer
8.	11-051769-000		Lock Washer
9.	11-051743-000		Locknut
10.	47-037451-000		Upper Motor Mounting Plate
11.	11-052028-000		Flat Washer
12.	11-051771-000		Lock Washer
13.	11-051005-000		Hex Head Cap Screw (M10 x 20 mm)
14.	47-037452-000		Plate
15.	11-052050-001		Flat Washer
16.	11-051745-000		Locknut
17.	47-036697-001		Bracket
18.	11-053912-000		Belt
19.	47-025049-003		V-Belt Pulley
20.	47-036700-001		Shaft
21.	11-053508-001		Key
22.	11-053509-001		Key
23.	11-051853-000		Retaining Ring
24.	47-014752-003		Bearing Housing
25.	11-430015-000		Bearing
26.	11-052007-000		Flat Washer
27.	47-036701-001		Driving Roller
28.	11-051520-000		Socket Head Cap Screw (M3 x 30 mm)
29.	11-051093-000		Hex Head Cap Screw (M10 x 75 mm)
30.	47-035344-004		Plate
31.	11-052018-001		Flat Washer
32.	47-035225-000		Ball Accelerator Support
33.	47-035235-000		Support Bracket
34.	47-035229-000		Shaft Holder
35.	11-051087-000		Hex Head Cap Screw (M10 x 65 mm)
36.	47-036704-000		Cross Support Brace
37.	47-035345-003		Plate
38.	47-037191-000		Support Bar
39.	11-052019-000		Flat Washer
40.	11-051704-001		Hex Nut
41.	47-036705-000		Tension Rod
42.	47-031248-004		Spring
43.	47-035231-000		Ball Accelerator Support
44.	47-035230-004		Shaft
45.	47-031454-000		Pivoting Level Comp
46.	47-035232-000		Wheel Assembly includes index nos. 46a, 46b, and 46c
	46a. 47-035233-004		Shaft Lower
	46b. 11-430016-000		Bearing
	46c. 47-035232-C01		Wheel
47.	11-051021-000		Hex Head Cap Screw (M10 x 35 mm)
48.	10-635127-000		Flat Belt
49.	47-036696-009		Belt Drive Assembly - contains index nos. 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 19, 20, 21, 22, 23, 24, 25, 2+, 27, 28, and 39
50.	47-035234-004		Spacer

Ball Accelerator- Belt Drive (SUBWAY)

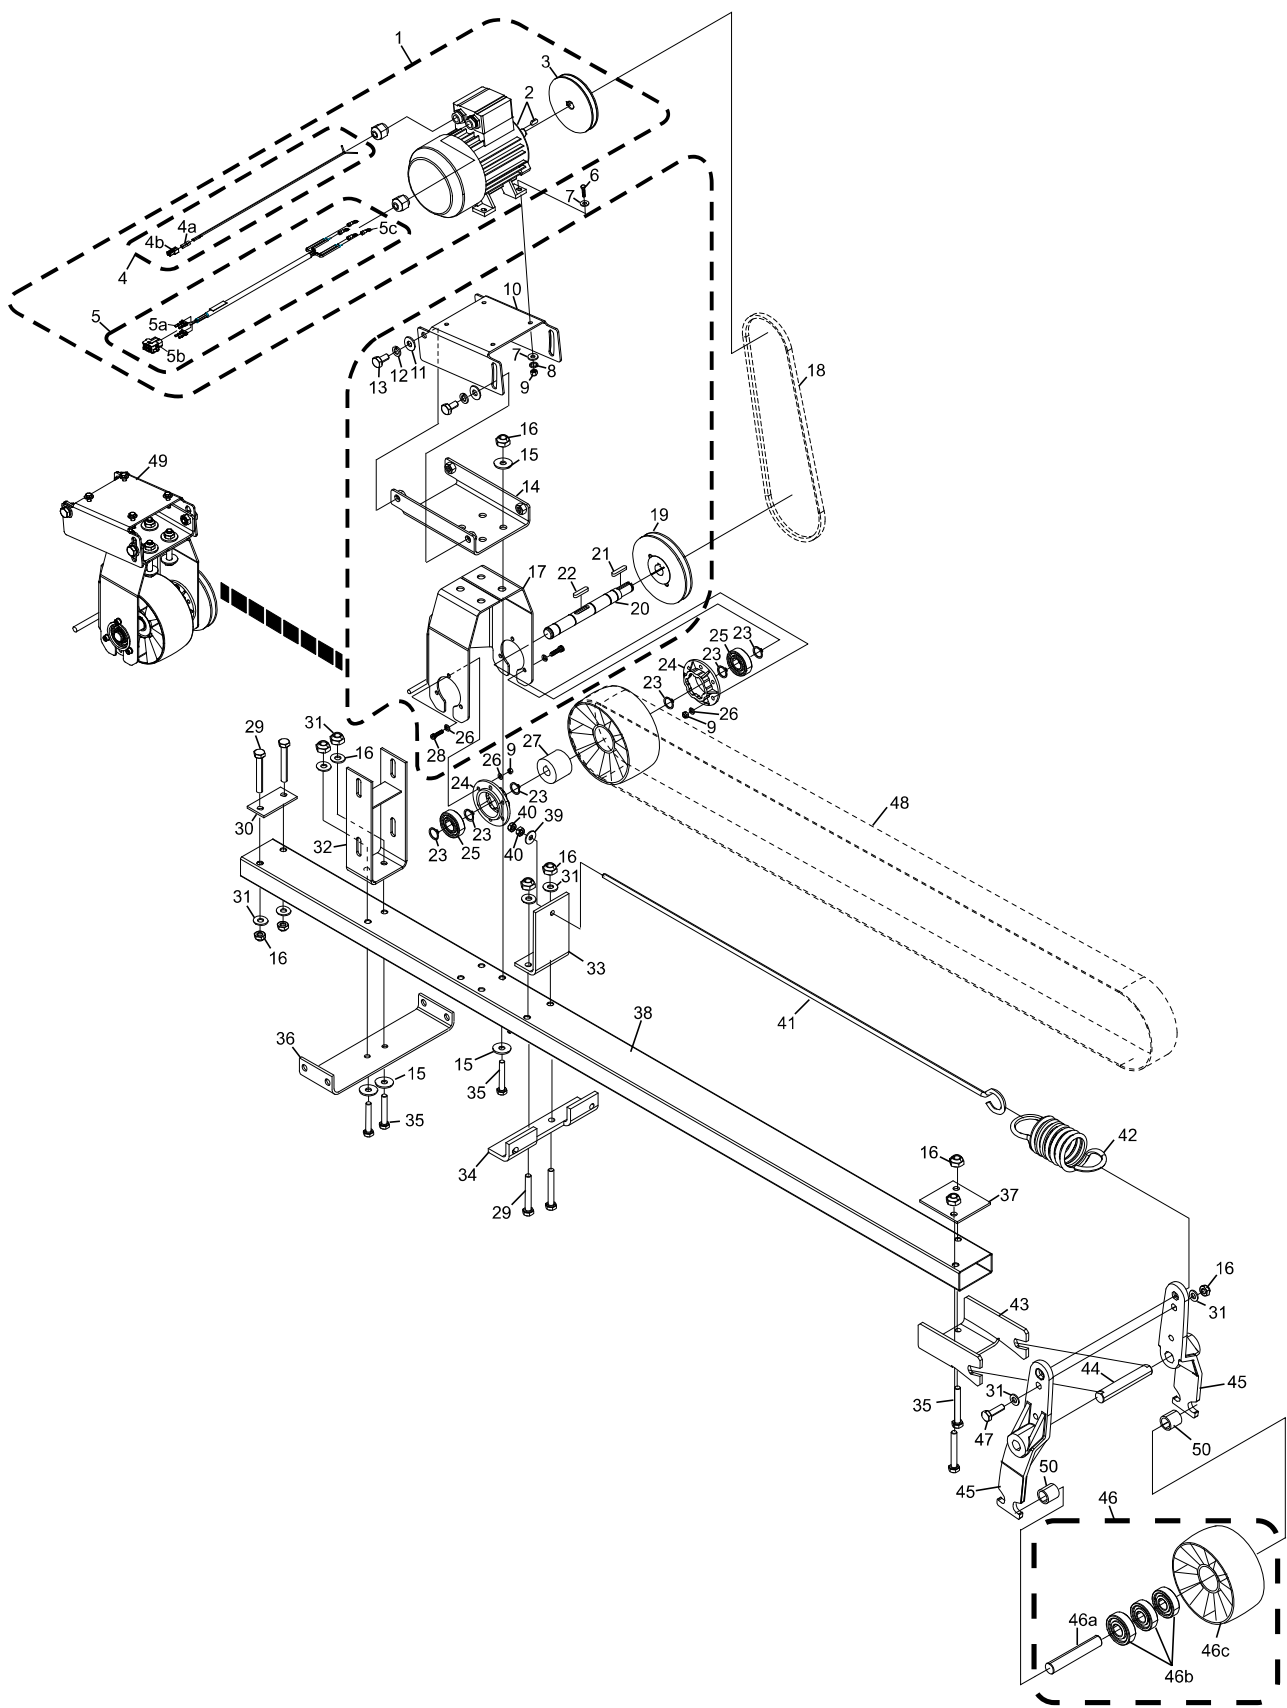

Ball Accelerator - Belt Drive (SUBWAY)