


Index No.	Part No.	Description
1.	53-600192-000	Intellifoul Chassis
2.	53-600193-000	Assembly, Foul Detect
3.	53-600162-000	Intellifoul Base Plate
4.	11-051072-001	Screw Hex Head Cap (M6 x 14 mm)
5.	11-051743-001	Locknut
6.	11-052037-001	Flat Washer
7.	11-086307-001	Screw C.R Tapping (4-24 x 1")
8.	53-600164-000	Bracket Foul Sensor
9.	99-080180-004	Compression Spring
10.	53-600194-000	Assembly Foul Detector Box
11.	27-619007-000	Cable
12.	11-692091-000	<i>Terminal</i>
13.	11-692304-000	Connector Housing
14.	53-900196-000	Buzzer Assembly
15.	53-600103-000	Buzzer
16.	11-697201-000	Connector Housing
17.	11-680322-000	Terminal
18.	11-014022-000	Screw FHCR (6-32 x.038)
19.	53-600191-000	Intellifoul - Complete

Intellifoul

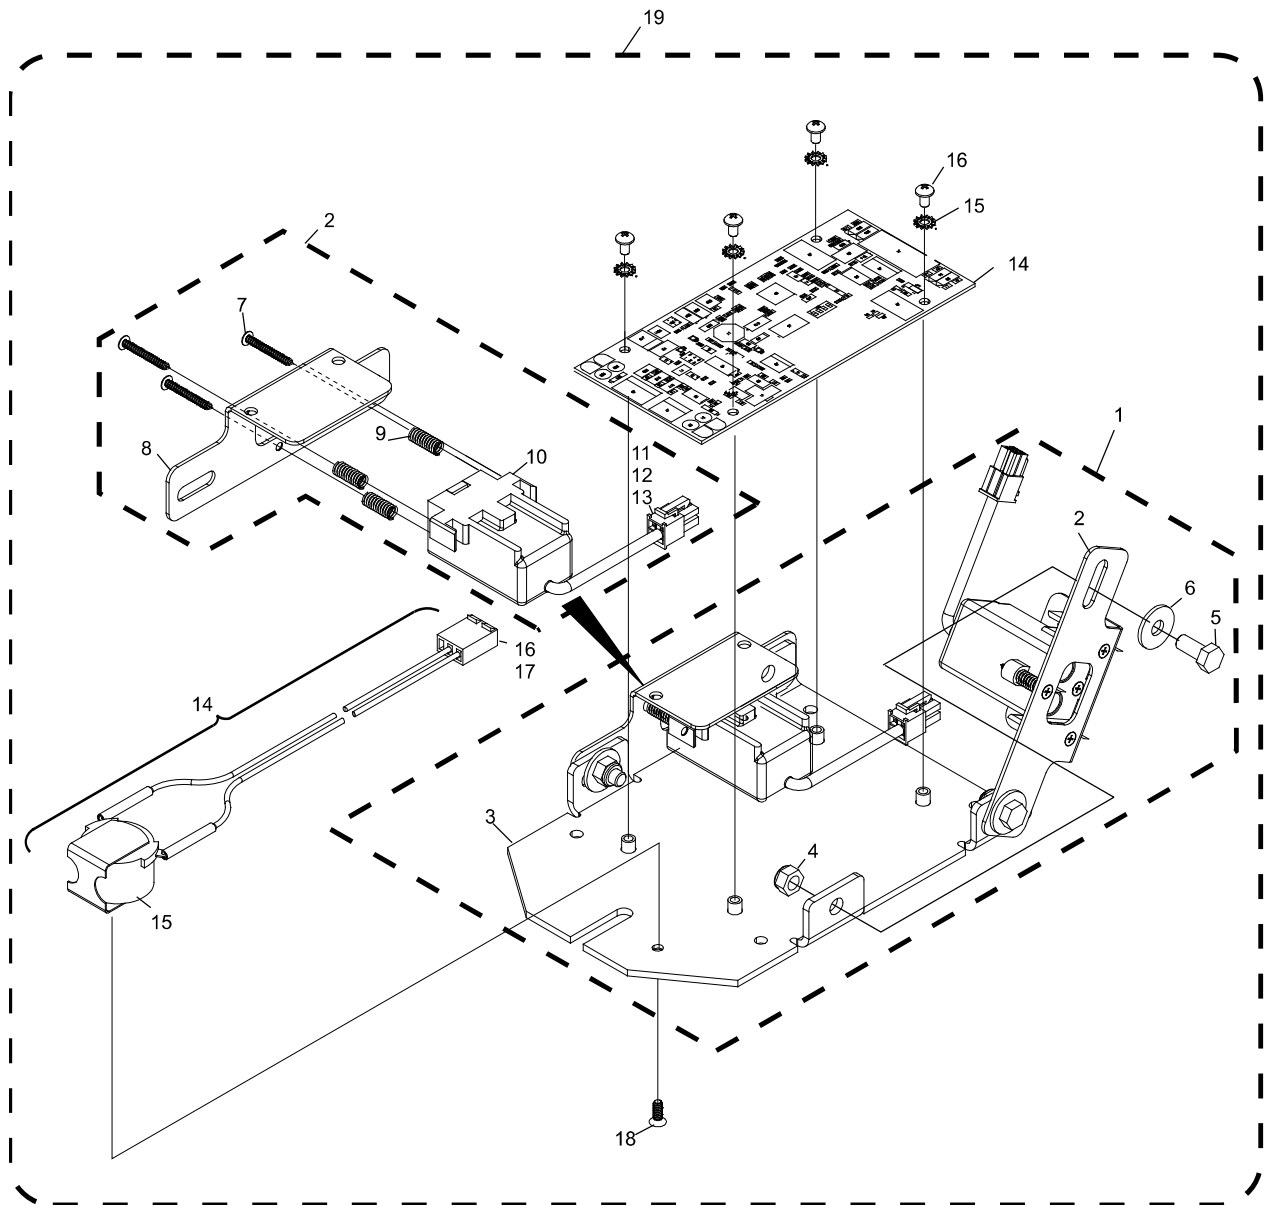

Intellifoul