


Index No.	Part No.	Description
1.	11-900717-000	Decal - Emergency Stop
2.	14-100450-000	Decal - CRC and Warranty Contact
3.	11-581012-000	Spring
4.	14-100146-000	Decal - Cautions and Warnings
5.	14-100838-000	Emergency Stop Assembly, DC Lane Machine
6.	11-176005-001	Keps Nut (#6-32)
7.	11-012020-001	Screw Pan Head C.R. Int. (#6-32 x 1/4).
8.	11-176007-001	Keps Nut (#8-32)
9.	11-012022-001	Screw Pan Head C.R. (#6-32)
10.	11-672528-000	Power Relay (T9A)
11.	11-530031-015	Retaining Ring (external)
12.	14-100822-000	Motor Control, Variable Speed, Battery Power
13.	14-100583-000	V3.0 Injector Driver Board - Assembly
14.	14-100610-000	Motor Controller PCB, 24V LM
15.	14-100750-400	DC Lane Machine, Controller PCB - Assembly
16.	14-100775-400	Electrical Control Enclosure
17.	11-603142-000	Cable Clamp (7/16")
18.	11-170002-015	Locknut (#6-32)
19.	11-199002-015	Internal Tooth Lockwasher (#8)
20.	11-006061-015	Button Head Hex Cap Screw (#8-32 x 3/8")
21.	14-100907-000	Remote Stop Receiver and Controller
22.	14-100945-000	Audio Beep Indicator - Assembly
23.	11-012006-015	Screw w/Lockwasher (#4-40 X 1/2")
24.	14-100932-000	DC Controller PCB Remote Reciever Cable
25.	14-100160-000	Cord Kill Switch Sleeve
26.	14-100162-000	Cord Kill Switch Assembly
27.	11-616031-000	Switch
28.	11-006007-000	Button Head Cap Screw (#4-40 x 5/8")
29.	11-170000-015	Nut (#4-40)
30.	14-100161-000	Switch Bracket
31.	14-100267-000	Cord Kill Stud Asembly
32.	14-100159-000	Cord Kill Switch
33.	11-696006-000	Thermal Circuit Breaker (25 Amp)

Electrical Enclosure

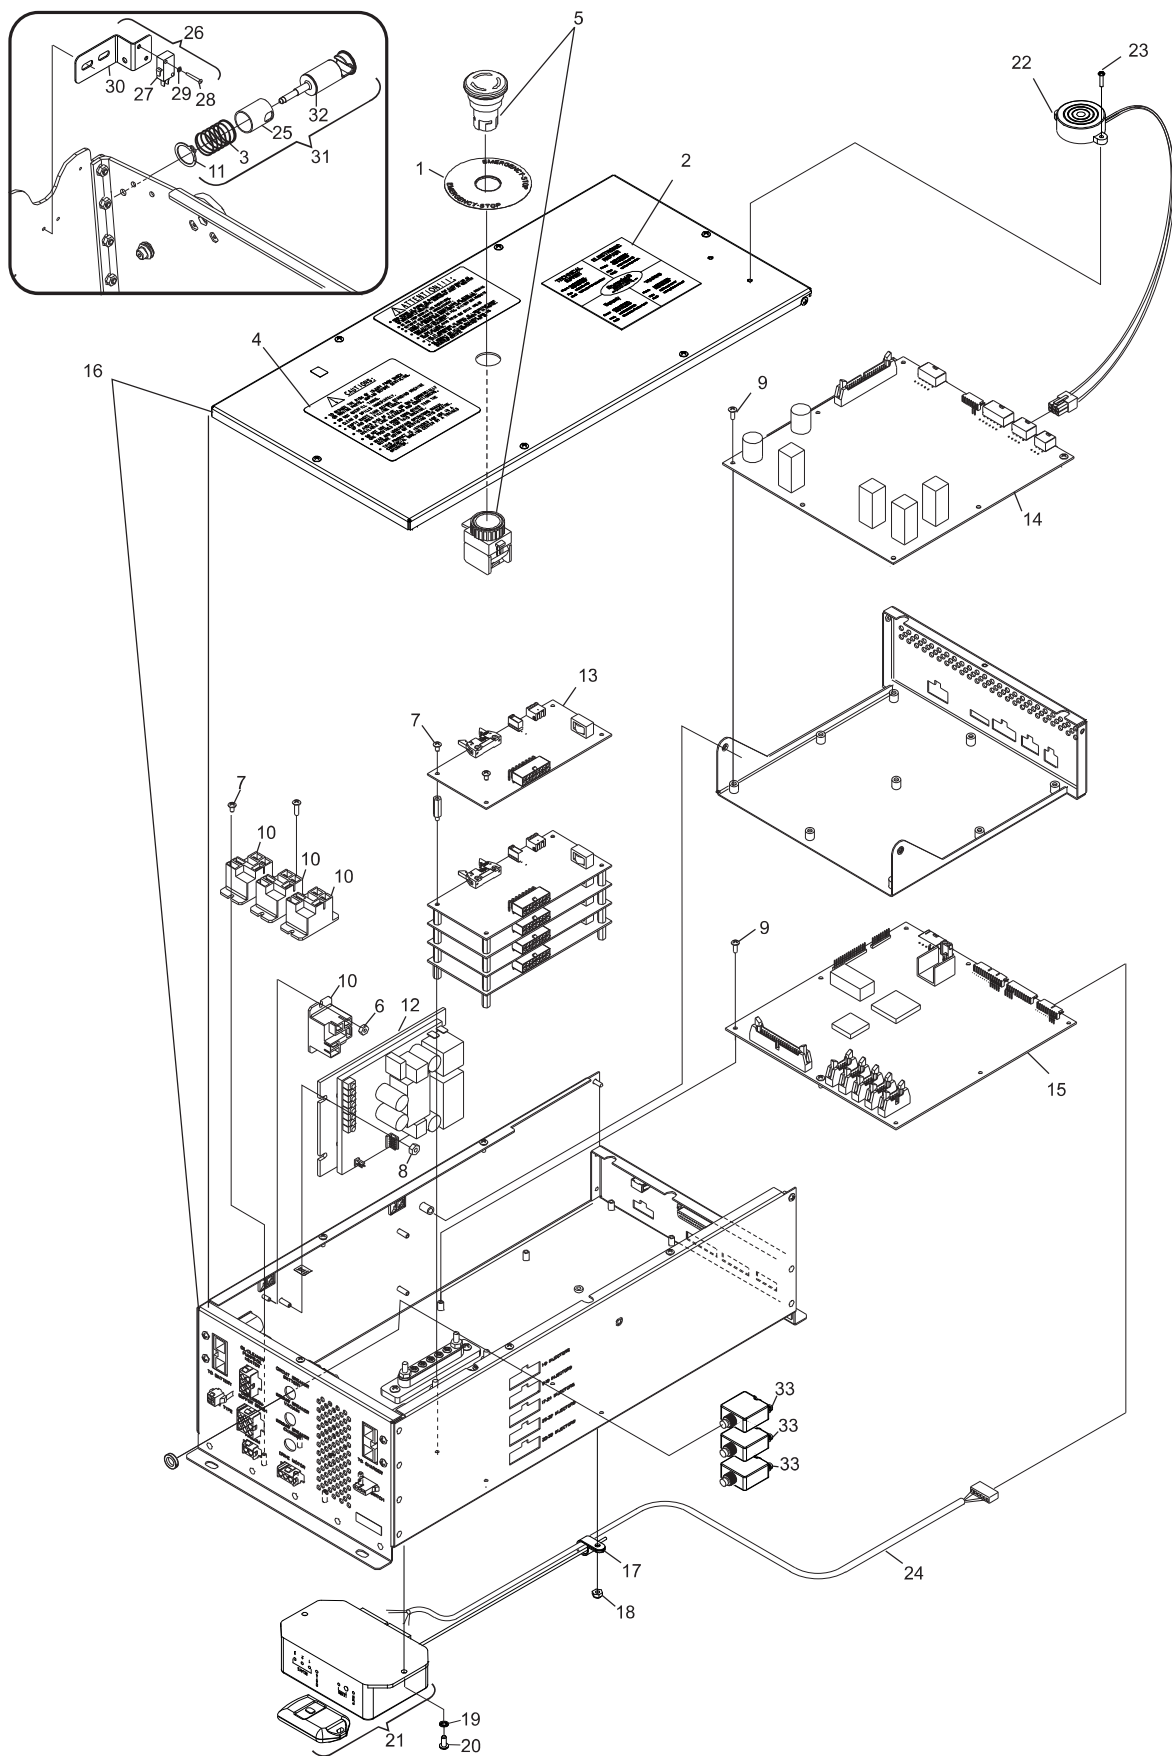

Electrical Enclosure