


Index No.	Part No.	Package / Order Reference	Description
1.	55-109489-xxx		Boost Ball Accelerator Complete w/Drive and Guide Assembly
2.	47-036695-xxx		Drive Assembly for Ball Accelerator (XXX)
3.	47-037474-009		Ball Guide Assembly
4.	55-109301-000		Curtain Holder
5.	11-054801-000		Button Head Socket Cap Screw (M8 x 20 mm)
6.	11-052003-000		Flat Washer
7.	11-051744-000		Lock Nut (M8)
8.	55-109490-000		Ball Accelerator Box Assembly
9.	47-035241-000		Accelerator Side Plate L.H.
10.	47-035240-001		Accelerator Side Plate R.H.
11.	11-054466-000		Button Head Screw (K60 x 25 mm)
12.	11-055800-000		EJOT Plastic Nut
13.	11-052933-000		Flat Socket Head Screw
14.	11-052020-000		Flat Washer
15.	11-051752-000		Locknut (M5)
16.	55-109495-000		Ball Accelerator Box Protector Plate
17.	11-052947-000		Flat Socket Head Screw
18.	11-053795-000		Pan Head Screw (M6 x 60 mm)
19.	11-051743-001		(M6) Locknut
20.	11-052008-000		(M6) Flat Washer
21.	47-035239-004		Holder
22.	47-035238-004		Ball Door Arm Shaft
23.	11-053101-001		Set Screw (M x 8 mm)
24.	11-053622-000		Stop Ring
25.	55-279288-009		Ball Cushion Stop Assembly L.H.
26.	55-279289-009		Ball Cushion Stop Assembly R.H. - Not Illustrated
27.	99-020434-004		Rubber Bumper
28.	11-052018-001		Flat Washer
29.	55-279288-000		Cushion Stop L.H.
30.	55-279289-000		Cushion Stop R.H. - Not Illustrated
31.	11-054805-000		Button Socket Head Cap Screw (M10 x 25 mm)
32.	11-051745-000		Locknut
33.	11-051018-000		Hex Head Cap Screw (M6 x 20 mm)
34.	47-035099-001		Ball Door Lever
35.	11-430046-000		Bearing
36.	47-034842-004		Bushing
37.	11-051067-000		Hex Head Cap Screw (M8 x 35 mm)
38.	99-010102-004		Bushing
39.	47-031822-004		Lever
40.	47-031054-002 L		Accelerator Ball Door L.H.
41.	47-031054-002 R		Accelerator Ball Door R.H. - Not Illustrated
42.	11-051793-000		Split Pin
43.	11-053477-000		Speed Nut
44.	47-034767-004		Tension Spring
45.	47-031056-003		Ball Door Key L.H.
46.	47-031055-003		Ball Door Key R.H. - Not Illustrated
47.	47-031091-004		Ball Door Shaft
48.	47-033555-009		Ball Door w/Arm Assembly, L.H.
49.	47-033556-009		Ball Door w/Arm Assembly, R.H.
50.	47-036706-009		Ball Door Sensor Assembly, L.H.
51.	47-036707-009		Ball Door Sensor Assembly, R.H. - Not Illustrated
52.	47-036711-001		Ball Door Sensor Bracket
53.	11-051746-000		Locknut
54.	11-050325-004		Micro Switch
55.	11-052216-000		Slot Head Machine Screw (M3 x 18 mm)
56.	47-030276-004		Door Spring

Ball Accelerator Assembly (Subway)

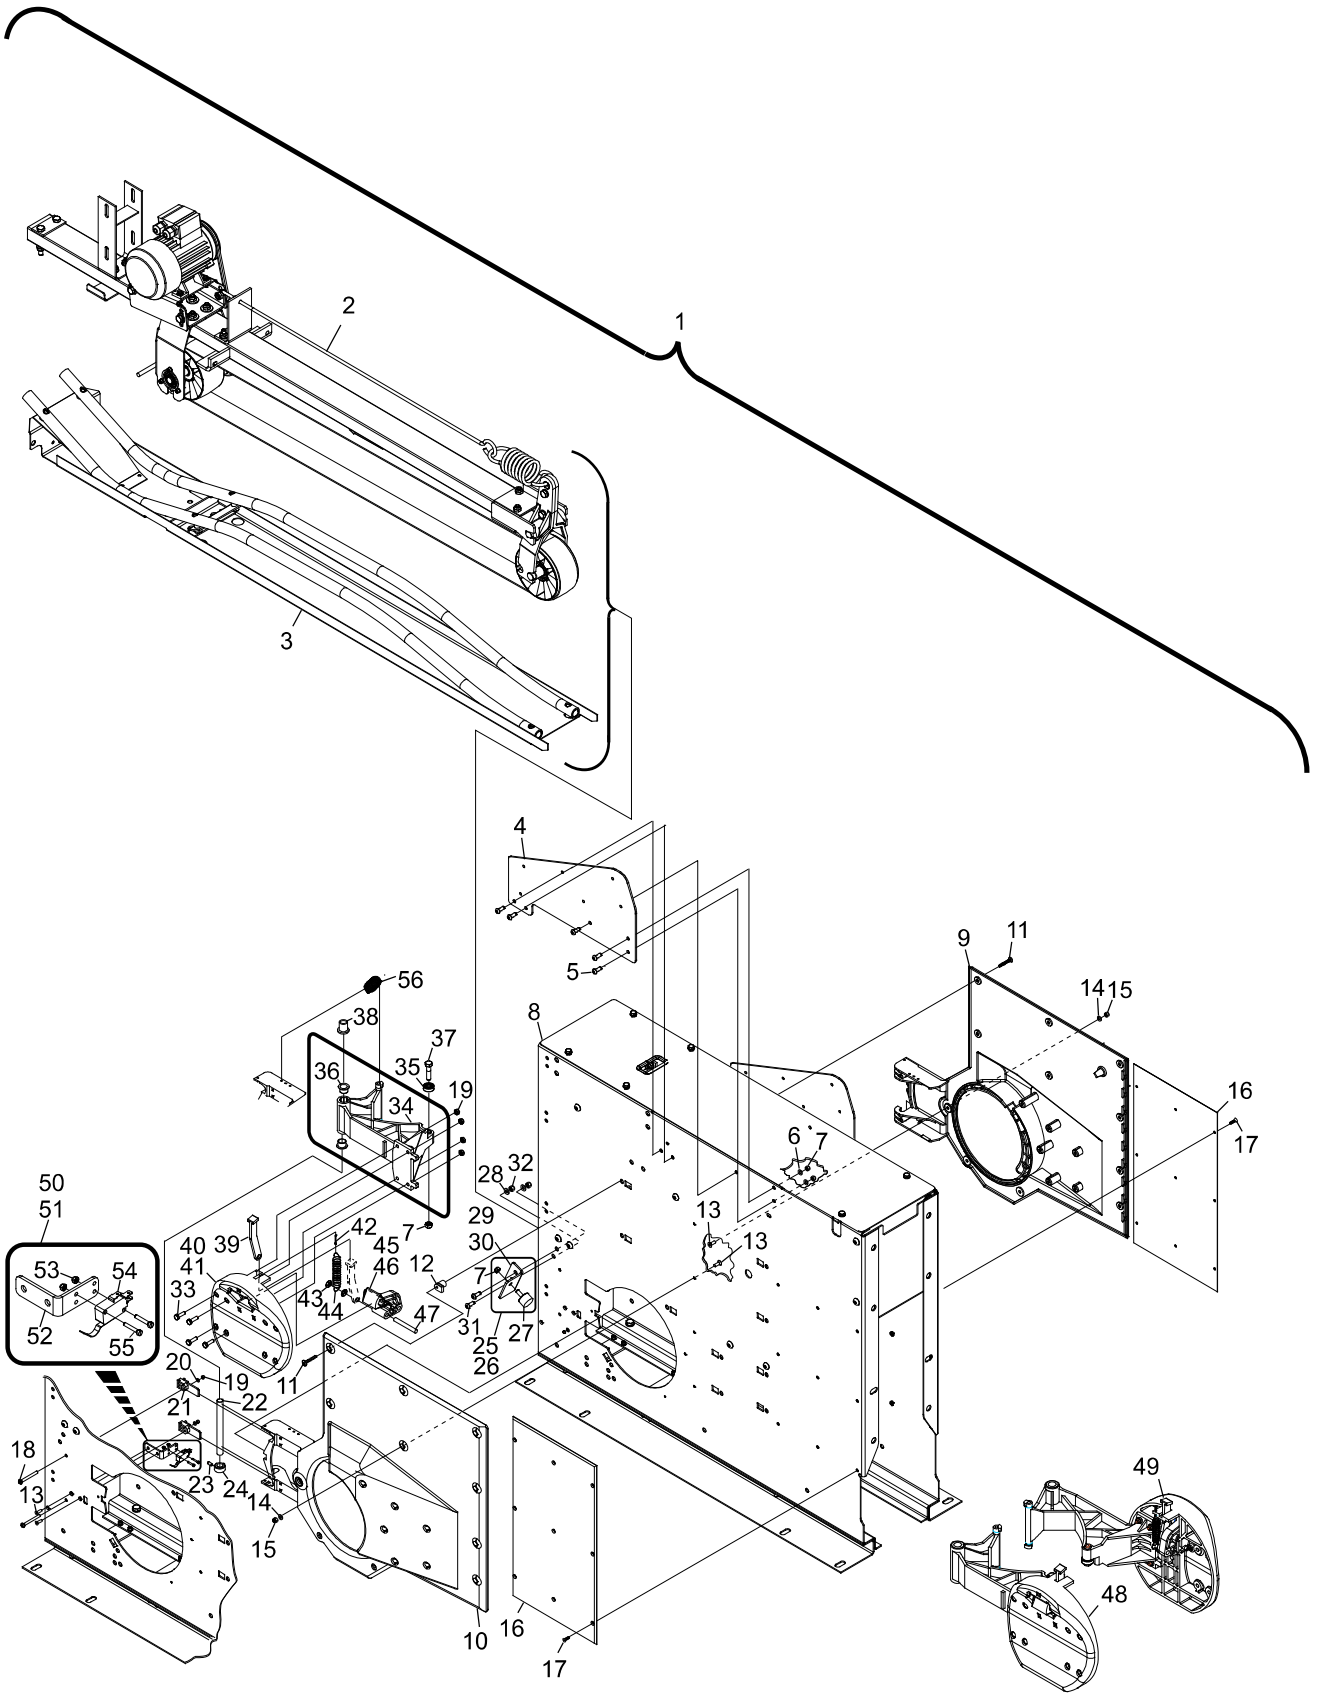

Ball Accelerator Assembly (Subway)